
Contrail plugin for Fuel Documentation

Release 5.1-5.1.0-1

Mirantis Inc.

Mar 21, 2017

1	Introduction	1
1.1	Key terms, acronyms and abbreviations	1
1.2	Overview	1
2	New features in plugin version 5.1-5.1.0-1	3
3	Limitations	4
4	Requirements	5
5	Installation Guide	6
5.1	Prerequisites	6
5.2	Install Contrail Plugin	6
5.3	Configure Contrail Plugin	8
6	DPDK-based vRouter	15
6.1	Description	15
6.2	Prerequisites	16
6.3	Restrictions	16
6.4	Configure DPDK	18
6.5	Verify DPDK	22
6.6	Change DPDK options	23
6.7	Change Huge Pages settings after deployment	24
7	DPDK-based vRouter on virtual function (VF)	25
7.1	Description	25
7.2	Prerequisites	25
7.3	How to enable DPDK on VF	25
8	Enable SR-IOV	27
8.1	Prerequisites	27
8.2	Features	27
8.3	SR-IOV Description	27
8.4	Verify SR-IOV environment	28
8.5	Enable SR-IOV in Fuel	28
8.6	Create a virtual machine with SR-IOV device	28

9	Contrail TSN	29
9.1	TSN Description	29
9.2	Prerequisites	29
9.3	HA implementation details	31
9.4	Configure TSN	31
10	Contrail with VMware vCenter	33
10.1	Overview	33
10.2	Prerequisites	34
10.3	Restrictions	34
10.4	Configuration	34
10.5	Verification	37
10.6	VMware related options	38
10.7	Add and delete ESXi hosts	39
11	Contrail upgrades (experimental)	40
11.1	Description	40
11.2	Prerequisites	40
11.3	Update the packages on Fuel Master node	40
11.4	Upgrade Contrail and OpenStack Controllers	42
11.5	Upgrade Compute nodes	42
12	Verify Contrail plugin	44
12.1	Run OSTF tests	46
12.2	Troubleshooting	48
13	Restore failed Contrail node	50
14	Use Contrail	52
14.1	Log into Contrail	53
14.2	Verify services status	54
14.3	Create the virtual networks	54
15	Appendix	56

This document contains instructions for installing and configuring Contrail plugin for Fuel.

Key terms, acronyms and abbreviations

Juniper Contrail	Contrail Cloud Platform is a foundational element of Juniper's open cloud networking and NFV solutions.
SDN	Software defined network
RESTful API	Representational state transfer application programming interface
IDS	Intrusion detection system
DPI	Deep packet inspection
VIP	virtual IP address
BGP	Border gateway protocol
AS	Autonomous system
Contrail vRouter	Contrail vRouter is part of the compute node, which gets reachability information from the control plane and ensures native L3 services for host-based virtual machines.
MOS	Mirantis OpenStack
TOR	Top of rack
TSN	TOR Services Node

Overview

Contrail plugin for Fuel adds Contrail SDN to Mirantis OpenStack as a networking back end option using Fuel web UI in a user-friendly manner. Juniper Networks Contrail is an open software defined networking solution that automates and orchestrates the creation of highly scalable virtual networks.

Contrail features:

- Powerful API calls (REST or direct python class calls)
- Analytics engine: traffic flow reports, statistics
- Network management at 2-4 OSI layers
- Service chaining architecture: you can transparently pass traffic through service instances such as IDS, firewalls, and DPI.
- Fine grained virtual network access policy control

New features in plugin version 5.1-5.1.0-1

- Fuel 9.2 with OpenStack Mitaka support
- Dedicated Analytics and Analytics DB node roles
- Contrail-Config, Contrail-Control and Contrail-DB are merged into Contrail-Controller role
- DPDK on VF, including bonded VFs
- Sahara and Murano compatibility
- vCenter as a secondary hypervisor support
- TSN in HA mode

- Plugin does not support removing Contrail-Controller and Analytics-DB nodes from a cluster. This can lead to data loss and must be a manual procedure. Plugin supports adding new Contrail-DB nodes to the environment.
- The Fuel Networking option “Assign public network to all nodes” is not compatible with Contrail Plugin.
- In case of using contrail service chaining with service instances, you may need to add *neutron* service user to a current project after you have deployed the environment:
 - Open OpenStack Dashboard, navigate to the *Identity - Projects* page.
 - Click *modify users* button on the right side of the **admin** project.
 - Add the **neutron** user to project members with **_member_** role.
- Changing the default OpenStack project name is not supported. Default project name should be **admin**.
- The password of OpenStack **admin** user should not contain following characters: \$, ~, \\ and !
- Upgrade procedure based on custom deployment graphs does not support upgrading nodes with roles dpdk, tsn and vmware. Contrail packages upgrades should be done manually on these nodes.

Requirements

The plugin has the following requirements for software and hardware:

Fuel version	9.2
Juniper Contrail version	3.2.0.0 testing was performed on 3.2.0.0-19
Hardware	<ul style="list-style-type: none">• At least 2 additional servers: for Contrail controller and for combined Analytics and Analytics-DB Analytics-DB requires 320 Gb disk space.• Additional network interface on each node except for MOS Controller.

Prerequisites

This guide assumes that you have installed [Fuel](#) and all the nodes of your future environment are discovered and functional.

Install Contrail Plugin

To install the Contrail plugin:

1. Download the Contrail plugin from the [Fuel Plugins Catalog](#).
2. Copy the rpm package downloaded at the previous step to the Fuel Master node and install the plugin

```
scp contrail-5.1-5.1.0-1.noarch.rpm <Fuel Master node ip>:/tmp/
```

3. Log into the Fuel Master node and install the plugin

```
ssh <the Fuel Master node ip>  
fuel plugins --install contrail-5.1-5.1.0-1.noarch.rpm
```

You should get the following output

```
Plugin <plugin-name-version>.rpm was successfully installed
```

4. Copy the Juniper Contrail installation package to the Fuel Master node and run the installation script to unpack the vendor package and populate the plugin repository:

Note: You can obtain the Juniper Contrail installation package from Juniper by subscription. More information can be found on the [official Juniper Contrail web-site](#).

```
scp contrail-install-packages_3.2.0.0-19~mitaka_all.deb \  
<Fuel Master node ip>:/var/www/nailgun/plugins/contrail-5.1/  
ssh <Fuel Master node ip> /var/www/nailgun/plugins/contrail-5.1/install.sh
```

5. In case if vmware integration expected, before running *install.sh* copy vcenter plugin package to contrail plugin folder

```
scp contrail-install-vcenter-plugin_3.2.0.0-19_all.deb \  
<Fuel Master node ip>:/var/www/nailgun/plugins/contrail-5.1/
```

Configure Contrail Plugin

To configure the Contrail plugin, follow the steps below:

1. Create environment in Fuel web UI.

Create a new OpenStack environment

Name and Release

Compute

Networking Setup

Storage Backends

Additional Services

Finish

Name

Contrail

OpenStack Release

Mitaka on Ubuntu 14.04

By default, Fuel uploads the software packages for the Fuel Slave nodes from the external repositories. Please verify the Fuel Master node has the Internet connection. If the Fuel Master node does not have access to the Internet, you must create a local mirror with all required software packages and configure Fuel to use the mirror before you deploy an OpenStack environment.

This option will install the OpenStack Mitaka packages using Ubuntu as a base operating system. With high availability features built in, you are getting a robust, enterprise-grade OpenStack deployment.

Cancel

← Prev

Next →

2. Please select KVM or QEMU hypervisor type for your environment also enable “vCenter” feature if vmware integration expected

Create a new OpenStack environment

Name and Release

Compute

Networking Setup

Storage Backends

Additional Services

Finish

☒ QEMU-KVM
 Select this option if you want to use QEMU as a hypervisor with capability of KVM acceleration.

☐ vCenter ⚠
 Select this option if you run OpenStack on VMware vCenter.

Plugin for DVS/NSX is required to create an environment with vCenter and Neutron.
[Please visit Fuel plugins page for details.](#)

Cancel

← Prev

Next →

- Please select Contrail SDN networking setup.

Create a new OpenStack environment

Name and Release

Compute

Networking Setup

Storage Backends

Additional Services

Finish

☒ **Contrail** ✓
Contrail SDN networking

☐ **Neutron with ML2 plugin** ✓
Framework that enables simultaneous utilization of the layer 2 networking technologies through drivers.

☐ **Neutron with VLAN segmentation**
Your network hardware must be configured for VLAN segmentation. This option supports up to 4095 networks.

☐ **Neutron with tunneling segmentation**
By default VXLAN tunnels will be used. This option supports millions of tenant data networks.

Cancel

← Prev

Next →

- If you plan to use Heat orchestration with autoscaling, install Ceilometer.

Create a new OpenStack environment

Name and Release

Compute

Networking Setup

Storage Backends

Additional Services

Finish

☐ **Install Sahara** ⓘ
Sahara enables on demand provisioning of Hadoop clusters to be deployed on OpenStack utilizing a variety of vendor distributions.

☐ **Install Murano** ⓘ
Murano is an application catalog, which allows application developers and cloud administrators to publish various cloud-ready applications in a browsable categorized catalog, which may be used by the cloud users (including the inexperienced ones) to pick-up the needed applications and services and composes the reliable environments out of them in a "push-the-button" manner.

☒ **Install Ceilometer (OpenStack Telemetry)** ⓘ
Ceilometer provides metering and monitoring of an OpenStack cloud.

☐ **Install Ironic** ⓘ
Ironic enables baremetal provisioning.

Cancel

← Prev

Next →

- Enable the plugin and fill configuration fields with correct values:
 - AS number for BGP Gateway nodes communication defaults to 64512
 - IP addresses of gateway nodes provided as a comma-separated list - peer addresses for BGP interaction with border routers.

6. Add nodes and assign them the following roles:

- At least 1 Controller
- At least 1 Compute
- At least 1 Contrail-Controller

Note: Three or the greater odd number of nodes recommended for HA.

- At least 1 Contrail-Analytics + Contrail-Analytics-DB

Note: Three or the greater odd number of nodes recommended for HA.

- If you plan to use Heat with autoscaling, in addition to Ceilometer you need to add node with MongoDB role

The figure below shows sample node configuration.

The screenshot shows the Fuel web interface with the following node configurations:

- Controller (1)**: 1 node, `slave-01_controller`, role `CONTROLLER`, status `DISCOVERED PENDING ADDITION`, CPU: 4 (4), RAM: 6.0 GB, HDD: 1.5 TB.
- Compute (1)**: 1 node, `slave-03_compute_cinder`, role `COMPUTE`, status `DISCOVERED PENDING ADDITION`, CPU: 4 (4), RAM: 6.0 GB, HDD: 1.5 TB.
- Contrail - Analytics DB, Contrail - Analytics (1)**: 1 node, `slave-07_contrail-analytics-db`, role `CONTRAIL-ANALYTICS-DB - CONTRAIL-ANALYTICS`, status `DISCOVERED PENDING ADDITION`, CPU: 4 (4), RAM: 6.0 GB, HDD: 1.5 TB. This group is selected.
- Contrail - Controller (1)**: 1 node, `slave-05_contrail-controller`, role `CONTRAIL-CONTROLLER`, status `DISCOVERED PENDING ADDITION`, CPU: 4 (4), RAM: 6.0 GB, HDD: 1.5 TB.

- The recommended size of partition for the Contrail-Analytics database is 256 GB or more.
- Configure the network settings. See details at [Fuel User Guide](#).

Open *Nodes* tab, select all the nodes and press *Configure interfaces* button

The screenshot shows the Fuel web interface with the 'Nodes' tab selected. The 'Configure Interfaces' button is highlighted with a red box. The 'Select All' checkbox is also highlighted with a red box.

Set Private network to the separate network interface.

Warning: Do not use this physical interface for any other network.

Contrail vRouter will use this interface. Set the bigger MTU for Private interfaces, for example 9000, if switching hardware supports Jumbo Frames. This will enhance contrail network performance by avoiding packet fragmentation within Private network.

Dashboard
Nodes
Networks
Settings
Logs
Health Check

Network Settings
(Neutron with tunneling segmentation)

Add New Node Network Group

Node Network Groups

default

Settings

Neutron L2
Neutron L3
Other

Network Verification

Connectivity Check

default
This node network group uses a shared admin network and cannot be deleted

Public

The Public network allows inbound connections to VMs (Controllers and Tenant VMs) from external networks (e.g., the Internet) as well as outbound connections from VMs to the external networks.

CIDR
10.109.3.0/24
☐ Use the whole CIDR

Start
End

10.109.3.2
10.109.3.127

Gateway
10.109.3.1

Use VLAN tagging
☐

Storage

The Storage network is used to provide storage services such as replication traffic from Ceph. The Management network is used for Ceph Public traffic.

CIDR
10.109.2.0/24
☐ Use the whole CIDR

Start
End

10.109.2.2
10.109.2.254

Use VLAN tagging
☐

Management

The Management network is primarily used for OpenStack Cloud Management. It is used to access OpenStack services (nova-api, OpenStack dashboard, etc).

CIDR
10.109.1.0/24
☐ Use the whole CIDR

Start
End

10.109.1.2
10.109.1.254

Use VLAN tagging
☐

Private

The private network facilitates communication between each tenant's VMs. Private network address spaces are not a part of the public network address space; fixed IPs of virtual instances cannot be accessed directly from the rest of the public network.

CIDR
10.109.4.0/24
☐ Use the whole CIDR

Start
End

10.109.4.2
10.109.4.254

Use VLAN tagging
☐

Cancel Changes
Save Settings

5.3. Configure Contrail Plugin

11

Warning: First usable addresses from the Private network will be used as VIP for Contrail controllers. For example, if your Private network CIDR is 192.168.200.0/24, then Contrail VIP will be 192.168.200.1. If you want to use other IP as VIP, you need to specify a range for this network.

9. Example of network configuration

Use hardware servers with two network interfaces as OpenStack nodes. The interfaces configuration is as follows:

- Management and Storage networks are on the same interface with Admin network using tagged VLANs
- The second interface is dedicated to Public network as untagged
- The forth interface is dedicated to Contrail operations as untagged (Private network)

contrail01 (1 node)

Dashboard Nodes Networks Settings Logs Health Check

Configure interfaces on Untitled (54:83)

Bond Network Interfaces Unbond Network Interfaces

<input type="checkbox"/>	Name: enp0s3 MAC: 64:df:7e:3f:54:83 Speed: 1.0 Gbps	Admin (PXE)	Storage VLAN ID:102	Management VLAN ID:103	Offloading Modes: Default	MTU: Default
<input type="checkbox"/>	Name: enp0s4 MAC: 64:50:5e:2d:7c:32 Speed: 1.0 Gbps	Public			Offloading Modes: Default	MTU: Default
<input type="checkbox"/>	Name: enp0s5 MAC: 64:93:2c:dd:a0:2b Speed: 1.0 Gbps	You can drag and drop logical networks between the interfaces			Offloading Modes: Default	MTU: Default
<input type="checkbox"/>	Name: enp0s6 MAC: 64:06:cd:8e:1d:40 Speed: 1.0 Gbps	Private			Offloading Modes: Default	MTU: Default
<input type="checkbox"/>	Name: enp0s7 MAC: 64:c2:ee:f9:e8:8c Speed: 1.0 Gbps	You can drag and drop logical networks between the interfaces			Offloading Modes: Default	MTU: Default

Back To Node List Load Defaults Cancel Changes Apply

Warning:

- Be sure to launch [network verification check](#) before starting deployment. Incorrect network configuration will result in non-functioning environment.
- Some environments may require changes to default networks created during deployment for OSTF tests. For example, the network allocated for floating IP addresses may need some exclusions in address allocation for more specific routes. This affects the ability to deploy changes to OpenStack environments with fails on default network creation. For this reason Contrail plugin settings have an option that disables creation of default ostf networks. By default, this option is enabled.

OpenStack Settings

General ☒ Fuel Contrail plugin

Security

Compute

Storage

Logging

OpenStack Services

Other

Versions ☒ 4.0.1

AS Number AS number for BGP communication

GW IP Comma separated IP addresses of BGP peers.

External IP CIDR The CIDR for Contrail external network

Route Target The route target number for Contrail external network

Listen port for Contrail API on Public VIP The listen port for Contrail API endpoint for Public VIP. Default value 8082 may not be used if Murano is installed, as it uses the same port

☐ Enable DPDK feature for this environment.
Enable this option to unlock the DPDK feature.
NOTE: You still have to assign DPDK-role to compute nodes to enable DPDK on them.

☐ Enable SRIOV feature for this environment.
Enable this option to unlock the SRIOV feature. NOTE: You still have to assign SRIOV-role to compute nodes to enable SRIOV on them.

☐ Enable ToR agents (experimental)
Enable this option to unlock the Tor Agent configuration feature.

☒ Provision ostf networks
Disable this option to disable provisioning ostf networks


10. Press *Deploy changes* to deploy the environment (page 25).

After installation is finished, you can access [Contrail web UI](#) using the same IP address as OpenStack Dashboard and port 8143 through HTTPS protocol. For example, if you configured public network as described on the screenshot above, then you can access Contrail web UI through `https://<Public-VIP>:8143`.

Description

The Data Plane Development Kit (DPDK) is a set of data plane libraries and network interface controller drivers for fast packet processing. The DPDK provides a programming framework for Intel x86 processors and enables faster development of high-speed data packet networking applications.


By default, Contrail virtual router (vRouter) is running as a kernel module on Linux.

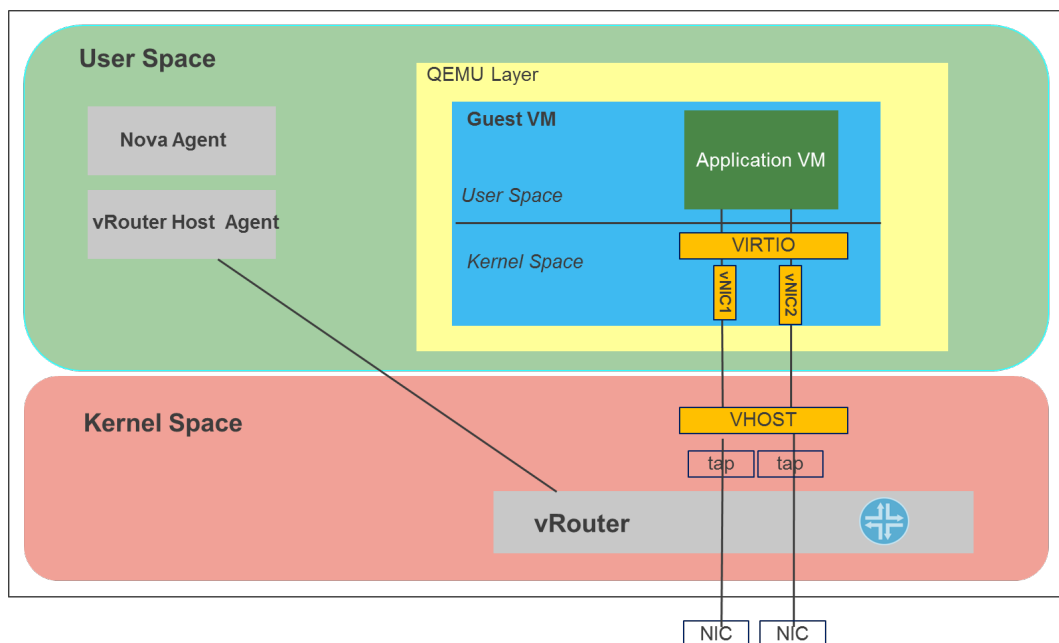

The vRouter module can fill a 10G link with TCP traffic from a virtual machine (VM) on one server to a VM on another server without making any assumptions about hardware capabilities in the server NICs. Also, to support interoperability and use a standards-based approach, vRouter does not use new protocols and encapsulations. However, in network function virtualization

(NFV) scenarios, other performance metrics such as packets-per-second (pps) and latency are as important as TCP bandwidth. With a kernel module, the pps number is limited by various factors such as the number of VM exits, memory copies, and the overhead of processing interrupts.

To optimize performance for NFV use cases, vRouter can be integrated with the Intel DPDK (Data Plane Development Kit). To integrate with DPDK, vRouter can now run as a user process instead of a kernel module.

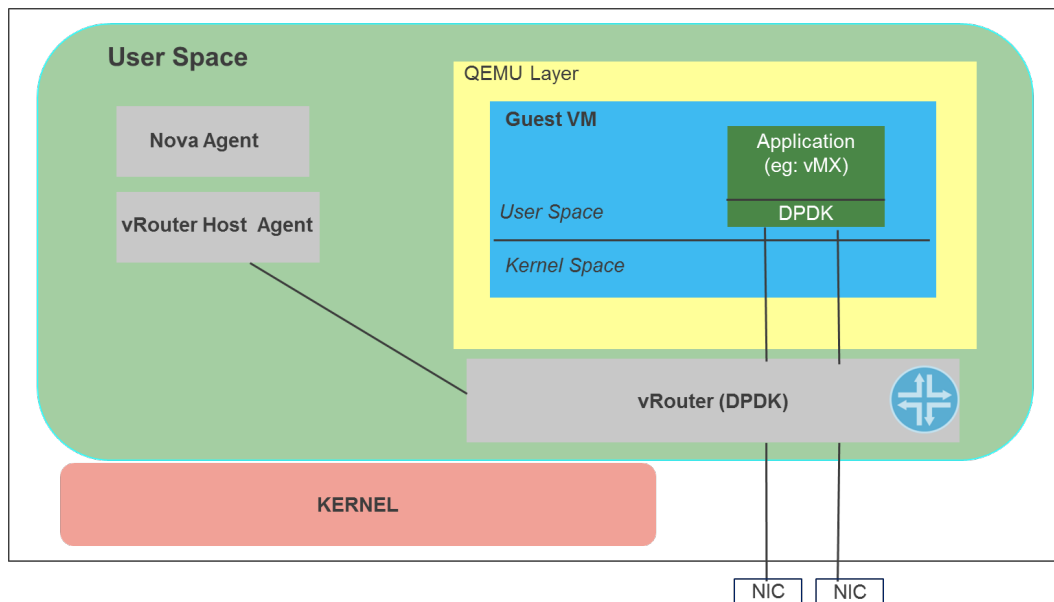

This process links with the DPDK libraries and communicates with the vRouter host agent, which runs as a separate process. You can write an application inside of the guest VM to use the DPDK API or you can use the traditional socket API. However, for NFV applications such as vMX, which require high performance, using the DPDK API inside the VM is preferable.

Prerequisites

- Installed [Fuel 8.0](#)
- Installed Contrail plugin [Installation Guide](#)
- Environment must support KVM for compute virtualization and Neutron with tunneling segmentation for networking
- Network card must support DPDK. List of compatible adapters can be found on the [DPDK website](#)

Restrictions

- Only compute hosts can be configured with DPDK role. DPDK role is just a mark that enables DPDK feature on a certain compute node. If you try to use DPDK role with other roles, DPDK role won't have any effect.
- Contrail DPDK feature doesn't work with qemu virtualization as far as with nested KVM.

This means that for current release DPDK-based vRouter works only on baremetal computes.

- Contrail DPDK vRouter permanently uses 1GB of hugepages. Therefore, you need to allocate enough amount of hugepages to run vRouter and VMs with DPDK.

Configure DPDK

To configure DPDK you should proceed with the following steps:

1. Enable the Contrail plugin in Fuel web UI settings


2. Enable DPDK on Fuel web UI

The screenshot shows the 'OpenStack Settings' web UI. The 'Common' tab is selected. The 'Fuel Contrail plugin' is enabled. The 'Versions' section shows '5.0.0' selected. The 'AS Number' is set to '64512'. The 'GW IP for Private net' is empty. The 'GW IP' is set to '10.109.4.250'. The 'Floating IP CIDR' is set to '10.100.1.0/24'. The 'Route Target' is set to '10000'. The 'Listen port for Contrail API on Public VIP' is set to '8082'. The 'AAA Mode' is set to 'Cloud Admin'. The 'Enable DPDK feature for this environment' section is highlighted with a red box. It contains the following options:

- ☒ Enable DPDK feature for this environment. Enable this option to unlock the DPDK feature. NOTE: You still have to assign DPDK-role to compute nodes to enable DPDK on them.
- ☒ Patch Nova Patch Nova packages for dpdk-vrouter
- ☒ Install Qemu and Libvirt from Contrail Install Qemu and Libvirt packages from contrail repository
- ☐ DPDK on VF Configure DPDK vrouter use VF network adapter
- ☐ Enable ToR agents Enable this option to unlock the Tor Agent configuration feature.
- ☒ Provision ostf networks Disable this option to disable provisioning ostf networks

At the bottom right, there are three buttons: 'Load Defaults', 'Cancel Changes', and 'Save Settings'.

- Choose the size and amount of huge pages to allocate for each Compute. They will be used for both vRouter process and VMs backing. 2MB sized huge pages can be added on-fly, 1GB sized require a reboot. Also, leave some amount of memory for the operating system itself.

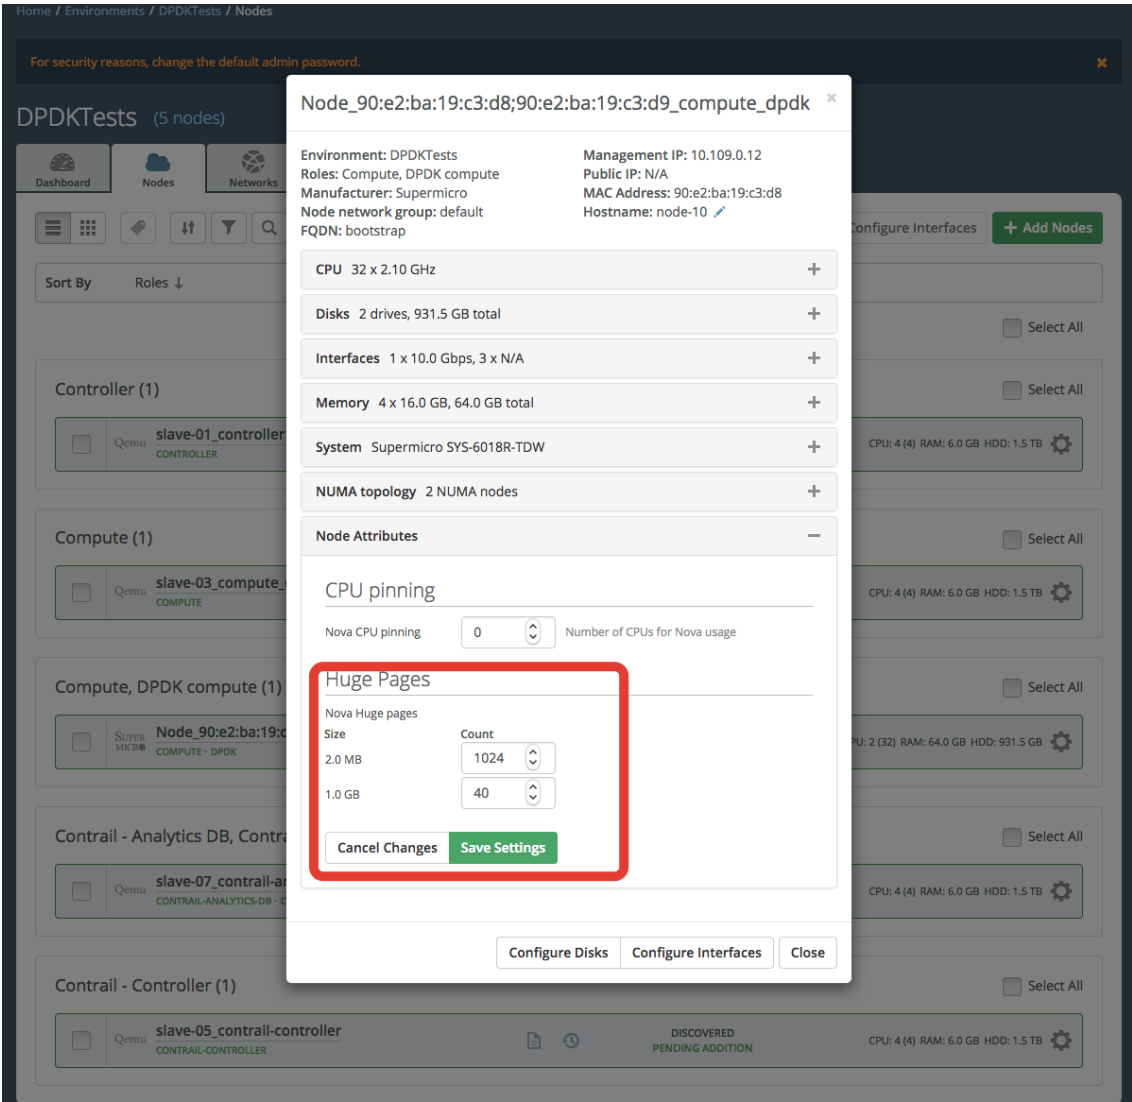

4. Add DPDK role on computes where you want to have DPDK-based vRouter.

Note: Computes that are not marked with DPDK role will use kernel-based vRouter.

The screenshot displays the Fuel web interface with four groups of VMs, each with a 'Select All' checkbox in the top right corner.

- Controller, Telemetry - MongoDB (1):** Contains one VM named 'Untitled (3b:3e)' with roles 'CONTROLLER - MONGO', status 'PENDING ADDITION', and resources 'CPU: 0 (4) HDD: 1.0 TB RAM: 4.0 GB'.
- Compute, Storage - Ceph OSD (2):** Contains two VMs, both named 'Untitled (f1:f3)' and 'Untitled (b6:d9)', with roles 'COMPUTE - CEPH-OSD', status 'PENDING ADDITION', and resources 'CPU: 0 (4) HDD: 1.0 TB RAM: 4.0 GB'.
- Compute, DPDK compute (1):** Contains one VM named 'Untitled (21:99)' with roles 'COMPUTE - DPDK', status 'PENDING ADDITION', and resources 'CPU: 2 (24) HDD: 0.7 TB RAM: 64.0 GB'.
- Contrail - Config, Contrail - Control, Contrail - DB (2):** Contains two VMs, both named 'Untitled (d7:bc)' and 'Untitled (25:1f)', with roles 'CONTRAIL-CONFIG - CONTRAIL-CONTROL - CONTRAIL-DB', status 'PENDING ADDITION', and resources 'CPU: 0 (4) HDD: 1.0 TB RAM: 4.0 GB'.

5. Deploy environment

Warning: Computes with DPDK-based vRouter require flavor with Huge Pages enabled. Instances with usual flavours can't be launched on DPDK-enabled hosts.

If DPDK is enabled in plugin settings, Fuel will create one flavor that will have Huge Pages support, named `m1.small.hpgs`. To create a custom flavor, follow the steps below on the controller node:

```
# . openrc
# nova flavor-create m2.small.hpgs auto 2000 20 2
# nova flavor-key m2.small.hpgs set hw:mem_page_size=large
# nova flavor-key m2.small.hpgs set aggregate_instance_extra_specs:hpgs=true
```


Verify DDPK

To verify your installation, proceed with basic checks below:

1. Verify that Contrail services and DDPK vRouter are running on a compute node:

```
contrail-status
```

System response:

```
== Contrail vRouter ==
supervisor-vrouter:      active
contrail-vrouter-agent   active
contrail-vrouter-dpdk    active
contrail-vrouter-nodemgr active
```

2. Verify if DDPK vRouter binds network interfaces:

```
/opt/contrail/bin/dpdk_nic_bind.py -s
```

Example of system response:

```
Network devices using DDPK-compatible driver
=====
0000:06:00.0 '82599ES 10-Gigabit SFI/SFP+ Network Connection' drv=igb_uio
unused=
Network devices using kernel driver
=====
0000:02:00.0 'I350 Gigabit Network Connection' if=eth0 drv=igb unused=igb_uio
0000:02:00.1 'I350 Gigabit Network Connection' if=eth1 drv=igb unused=igb_uio
0000:06:00.1 '82599ES 10-Gigabit SFI/SFP+ Network Connection' if=eth3 drv=ixgbe
unused=igb_uio
Other network devices
=====
<none>
```


3. Verify if vRouter uses Huge Pages:

```
grep Huge /proc/meminfo
```

Example of system response:

```
AnonHugePages:      0 kB
HugePages_Total:    30000
HugePages_Free:     29488
HugePages_Rsvd:      0
HugePages_Surp:      0
Hugepagesize:       2048 kB
```

4. Verify if vRouter uses CPU:

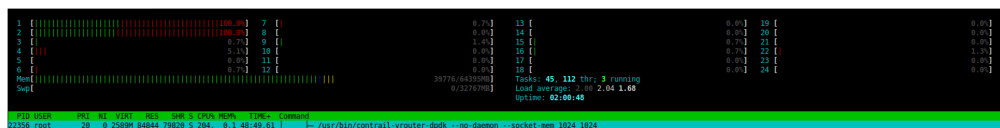

```

1 [|||||] 100.0% 7 [|||||] 0.7% 13 [|||||] 0.0% 19 [|||||] 0.0%
2 [|||||] 100.0% 8 [|||||] 0.0% 14 [|||||] 0.0% 20 [|||||] 0.0%
3 [|||||] 100.0% 9 [|||||] 1.0% 15 [|||||] 0.7% 21 [|||||] 0.0%
4 [|||||] 100.0% 10 [|||||] 0.0% 16 [|||||] 0.7% 22 [|||||] 1.3%
5 [|||||] 100.0% 11 [|||||] 0.0% 17 [|||||] 0.0% 23 [|||||] 0.0%
6 [|||||] 100.0% 12 [|||||] 0.0% 18 [|||||] 0.0% 24 [|||||] 0.0%
Host: [|||||] 3576/6435982 Tasks: 45, 112 thr, 3 running
Swapper: [|||||] 0/2170782 Load average: 1.00 2.04 1.46
Uptime: 62:00:40

PID USER PRS NI VIRT RES S CPU% MEM% TIME+ Command
2254 root 20 0 255M 8484 7828 0.204 0.1 48:49.01 /usr/bin/contrail-vrouter-dpdk -m-demon -socket-name 1024 1024
```

5. Verify if vRouter creates interface after creation of a virtual machine:

```
vif --list
```

Example of system response:

```
Vrouter Interface Table
Flags: P=Policy, X=Cross Connect, S=Service Chain, Mr=Receive Mirror
       Mt=Transmit Mirror, Tc=Transmit Checksum Offload, L3=Layer 3, L2=Layer 2
       D=DHCP, Vp=Vhost Physical, Pr=Promiscuous, Vnt=Native Vlan Tagged
       Mnp=No MAC Proxy, Dpdk=DPDK PMD Interface, Rfl=Receive Filtering Offload
       Mon=Interface is Monitored, Uuf=Unknown Unicast Flood
       Vof=VLAN insert/strip offload
vif0/0   PCI: 0:0:0.0 (Speed 10000, Duplex 1)
         Type:Physical HWaddr:00:1b:21:87:21:98 IPaddr:0
         Vrf:0 Flags:L3L2Vp MTU:1514 Ref:14
         RX device packets:3671 bytes:513937 errors:10
         RX port packets:3671 errors:0
         RX queue packets:6 errors:0
         RX queue errors to lcore 0 0 0 0 0 0 0 0 0 0 0
         RX packets:3671 bytes:499253 errors:0
         TX packets:4049 bytes:2135246 errors:0
         TX port packets:4049 errors:0
         TX device packets:4049 bytes:2135246 errors:0
vif0/1   Virtual: vhost0
         Type:Host HWaddr:00:1b:21:87:21:98 IPaddr:0
         Vrf:0 Flags:L3L2 MTU:1514 Ref:8
         RX port packets:4111 errors:0
         RX queue packets:4093 errors:0
         RX queue errors to lcore 0 0 0 0 0 0 0 0 0 0 0
         RX packets:4111 bytes:2143597 errors:0
         TX packets:3786 bytes:509223 errors:0
         TX queue packets:790 errors:0
         TX port packets:3771 errors:0
vif0/2   Socket: unix
         Type:Agent HWaddr:00:00:5e:00:01:00 IPaddr:0
         Vrf:65535 Flags:L3 MTU:1514 Ref:2
         RX port packets:45 errors:0
         RX queue errors to lcore 0 0 0 0 0 0 0 0 0 0 0
         RX packets:45 bytes:4322 errors:3
         TX packets:951 bytes:95940 errors:0
         TX queue packets:951 errors:0
         TX port packets:951 errors:0 syscalls:951
vif0/3   Ethernet: veth1404577d-b
         Type:Virtual HWaddr:00:00:5e:00:01:00 IPaddr:0
         Vrf:2 Flags:PL3L2D MTU:9160 Ref:11
         RX port packets:31 errors:0
         RX queue packets:24 errors:0
         RX queue errors to lcore 0 0 0 0 0 0 0 0 0 0 0
         RX packets:31 bytes:18164 errors:0
         TX packets:19 bytes:1091 errors:4
         TX queue packets:14 errors:0
         TX port packets:15 errors:0
```

Change DPDK options

This chapter describes how to change DPDK related options from Fuel web UI:

- *Enable DPDK feature for this environment* - this option enables DPDK globally. Still you must use DPDK role to mark a compute node with DPDK
- *Hugepage size* - specifies the size of huge pages that will be used for a dpdk feature. Verify if 1GB pages are supported on the target compute node:

```
grep pdpe1gb /proc/cpuinfo | uniq
```

- *Hugepages amount (%)* - sets amount of memory allocated on each compute node for huge pages. It will use % of all memory available on a compute node. DPDK vRouter permanently uses 1GB of huge pages and other applications running on compute node may not support huge pages. Therefore, use this parameter carefully.
- *CPU pinning* - this hexadecimal value describes how many and which exact processors `dpdk-vrouter` will use. CPU pinning is implemented using `taskset util`
- *Patch Nova* - in the MOS 8.0 release nova doesn't support DPDK-based vRouter. In future, MOS maintenance updates will include necessary patches.
- *Install Qemu and Libvirt from Contrail* - DPDK-based vRouter needs huge pages memory-backing for guests. MOS 8.0 includes qemu and libvirt that don't support huge pages memory-backing. DPDK feature needs qemu and libvirt from Contrail only on nodes with DPDK role.

Change Huge Pages settings after deployment

After deploy is finished, plugin settings are locked in Fuel web UI. Therefore, size and amount of huge pages cannot be changed by the plugin. You need to set Huge Pages settings manually on each compute node.

To set 2MB-sized huge pages:

1. Calculate the number of huge pages based on the amount you need. For example 20GB = $20 * 1024 / 2 = 10240$ pages.
2. Set 2MB-sized huge pages:

```
sysctl -w vm.nr_hugepages=<number of pages>
```

3. Edit the `/etc/sysctl.conf` file to make these changes persistent over reboots.

On the contrary to setting 2MB-sized huge pages, you can set 1GB-sized huge pages through the kernel parameter only, which requires a reboot to take effect. Kernel versions supplied with Ubuntu 14.04 don't support on the fly allocation for 1GB-sized huge pages.

To set 1GB-sized huge pages:

1. Edit the `/etc/default/grub` file and set needed amount of huge pages. For GRUB_CMDLINE_LINUX in `/etc/default/grub`:

```
GRUB_CMDLINE_LINUX="$GRUB_CMDLINE_LINUX hugepagesz=1024M hugepages=20
```

2. Update the bootloader and reboot for these parameters to take effect:

```
# update-grub
# reboot
```

DPDK-based vRouter on virtual function (VF)

Description

This guide describes how to run DPDK-based vRouter on virtual functions (VF). DPDK on VF depends on *Enable SR-IOV* and *DPDK-based vRouter* features. This feature shares a physical interface for DPDK and SR-IOV usage.

Prerequisites

- Installed [Fuel 9.1](#)
- Installed Fuel Contrail Plugin *Installation Guide*
- Environment must be created with “KVM” for compute virtualization and “Contrail” for networking
- Network card must support DPDK. List of compatible adapters can be found on [DPDK website](#)
- Network card must support SRIOV.

How to enable DPDK on VF

1. Enable DPDK feature *DPDK-based vRouter*.
2. Enable DPDK on VF in Fuel UI settings:

☒ **Enable DPDK feature for this environment.**
 Enable this option to unlock the DPDK feature.
 NOTE: You still have to assign DPDK-role to compute nodes to enable DPDK on them.

Hugepage size: Choose the size of hugepages that will be used for dpdk feature. Check if 1GB pages are supported on target compute node. # grep pdpe1gb /proc/cpuinfo | uniq

Hugepages amount (%): The amount of memory allocated on each compute-node for hugepages in percent

CPU pinning: Hexadecimal mask that determines how many and what exactly processors will be used for dpdk vrouter

☒ **Patch Nova**
 Patch Nova packages for dpdk-vrouter

☒ **Install Qemu and Libvirt from Contrail**
 Install Qemu and Libvirt packages from contrail repository





☒ **DPDK on VF**
 Configure DPDK vrouter use VF network adapter

☒ **Enable SRIOV feature for this environment.**
 Enable this option to unlock the SRIOV feature. NOTE: You still have to assign SRIOV-role to compute nodes to enable SRIOV on them.

Provide name for physical net: This physical network will be provided over SRIOV capable interfaces.

- Assign **Compute**, **DPDK**, and **DPDK-on-VF** roles to the host where you want to enable DPDK on VF feature:

Compute, DPDK compute, Compute with DPDK on VF (1) ☒ Select All

<input checked="" type="checkbox"/>		Node_90:e2:ba:19:c3:d8;90:e2:ba:19:c3:d9_cor	 	DISCOVERED PENDING ADDITION	CPU: 2 (32) RAM: 64.0 GB HDD: 931.5 GB 
		COMPUTE - DPDK - DPDK-ON-VF			

- Add `intel_iommu=on iommu=pt` to kernel parameters:

Kernel parameters

Initial parameters Default kernel parameters

- Deploy environment

If DPDK on VF is enabled in plugin settings, it will be deployed on computes with DPDK and DPDK-on-VF roles. During deploy following configurations will be made on compute nodes with DPDK and SR-IOV roles:

- Virtual functions will be allocated on private interface.
- First VF will be used for DPDK-based vRouter.
- Rest of the VFs will be added to `pci_passthrough_whitelist` setting in `nova.conf` for SR-IOV usage.

Prerequisites

This guide assumes that you have installed [Fuel](#) and performed steps 5.3.1 - 5.3.9 from *Installation Guide*. To enable SR-IOV, you need a SRIOV-capable network PCI card. Also, only compute hosts can be configured with the “SRIOV” role.

Features

1. You can have multiple VLANs inside one physical network
2. When using **Passthrough**, as in SR-IOV scenario, OpenStack does not provides dhcp and metadata. You have to manage that manually or provide an additional network port with a regular OpenStack network.

SR-IOV Description

Quoting [Mirantis blog post](#):

SR-IOV is a PCI Special Interest Group (PCI-SIG) specification for virtualizing network interfaces, representing each physical resource as a configurable entity (called a PF for Physical Function), and creating multiple virtual interfaces (VFs or Virtual Functions) with limited configurability on top of it, recruiting support for doing so from the system BIOS, and conventionally, also from the host OS or hypervisor. Among other benefits, SR-IOV makes it possible to run a very large number of network-traffic-handling VMs per compute without increasing the number of physical NICs/ports and provides means for pushing processing for this down into the hardware layer, off-loading the hypervisor and significantly improving both throughput and deterministic network performance.


Verify SR-IOV environment

To verify if network interface is SRIOV-capable and how many VFs are available, run the following command on the bootstrapped host:

```
lspci -s <bus ID> -vvv
```

Enable SR-IOV in Fuel

To enable SR-IOV in Fuel go to node interface configuration and enable it as shown on picture

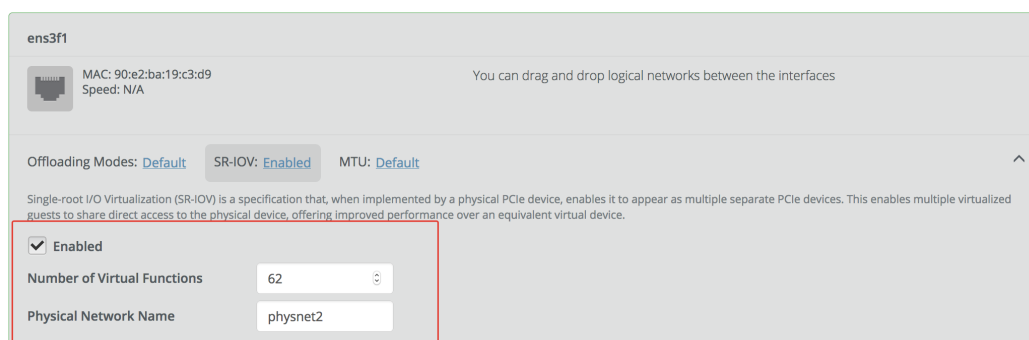

1. Deploy as in 5.3.10 *Installation Guide*

Create a virtual machine with SR-IOV device

To create a virtual machine with SR-IOV device:

1. Create a VM with configured physical network and VLAN id:

```
neutron net-create \
--provider:physical_network=<physical network from contrail settings tab> \
--provider: segmentation_id=<Vlan_id> <Network_Name>
```

2. Create a subnet:

```
neutron subnet-create <Network_name> <Subnet>
```

3. Create a port:

```
neutron port-create \
--fixed-ip subnet_id=<subnet uuid>,ip_address=<IP address from above subnet> \
--name <name of port> <vn uuid> --binding:vnic_type direct
```

4. Boot the VM with the port:

```
nova boot \
--flavor m1.large --image <image name> \
--nic port-id=<uuid of above port> <vm name>
```

TSN Description

Contrail supports extending a cluster to include bare metal servers and other virtual instances connected to a TOR switch supporting OVSDB protocol. You can configure the bare metal servers and other virtual instances to be a part of any of the virtual networks configured in the contrail cluster facilitating communication between them and the virtual instances running in the cluster. You can use Contrail policy configurations to control this communication.

The solution uses the OVSDB protocol to configure the TOR switch and to import dynamically learnt addresses from it. VXLAN encapsulation will be used in the data plane communication with the TOR switch.

A new node, the TOR services node (TSN), is introduced and provisioned as a new role in the Contrail system. The TSN acts as the multicast controller for the TOR switches. TSN also provides DHCP and DNS services to the bare metal servers or virtual instances running behind TOR ports.

TSN receives all the broadcast packets from the TOR, and replicates them to the required compute nodes in the cluster and to other EVPN nodes. Broadcast packets from the virtual machines in the cluster are sent directly from the respective compute nodes to the TOR switch.

TSN can also act as the DHCP server for the bare metal servers or virtual instances, leasing IP addresses to them, along with other DHCP options configured in the system. TSN also provides a DNS service for the bare metal servers.

See also:

[Contrail Wiki](#)

Prerequisites

This guide assumes that you have installed [Fuel](#) and all the nodes of your future environment are discovered and functional. To configure TSN in you environment, you need to perform steps

additional to *Installation Guide*

To configure TSN in your network, you need TOR switch.

HA implementation details

Contrail TSN in HA mode is implemented for default SSL mode.

All required certificates will be located on CONTRAIL-TSN node in location:

```
/var/lib/astute/tsn_certificates/certs
```

There will be two folders per TOR service. Folder named `tor_agent_<@id>` contain certs for tor agent service. Folder named `vtep_<@id>` contain certificates which should be delivered to ToR Switch.

Configure TSN

1. Enable ToR Agents

☒ Enable ToR agents (experimental) ⚠
Enable this option to unlock the Tor Agent configuration feature.

Configuration for TOR agents

```
01:
tor_mgmt_ip: 10.109.4.229
tor_tun_ip: 10.109.4.229
tor_device_name: ovs1
tor_vendor_name: ovs
02:
tor_mgmt_ip: 10.109.4.151
tor_tun_ip: 10.109.4.151
tor_device_name: ovs2
tor_vendor_name: ovs
```

Provide here configuration data for ToR agents in YAML format

2. Provide Tor Agents configuration in YAML format, based on example

```
01:
  tor_mgmt_ip: 10.109.4.150
  tor_tun_ip: 10.109.4.150
  tor_device_name: ovs1
  tor_vendor_name: ovs
02:
  tor_mgmt_ip: 10.109.4.151
  tor_tun_ip: 10.109.4.151
  tor_device_name: ovs2
  tor_vendor_name: ovs
```

3. Deploy additional node/nodes with CONTRAIL-TSN role

Contrail - TSN node (2)					<input type="checkbox"/> Select All
<input type="checkbox"/>	Qemu	Untitled (4e:90) CONTRAIL-TSN		READY	CPU: 4 (4) RAM: 4.0 GB HDD: 750.0 GB
<input type="checkbox"/>	Qemu	Untitled (51:20) CONTRAIL-TSN		READY	CPU: 4 (4) RAM: 4.0 GB HDD: 750.0 GB

4. Configure ToR Switches with SSL certificates located on TSN node in:

```
/var/lib/astute/tsn_certificates/certs
```


5. Verify working TSN by going to Contrail web UI

Overview

Starting from Contrail Release 3.0.0, it is possible to integrate Contrail with the VMware vCenter acting as an Openstack compute node.

This topic describes how configure Fuel Contrail Plugin to work with existing or already provisioned vSphere deployments that use OpenStack as the main orchestrator.

Integration with vCenter include two main roles: compute-vmware and contrail-vmware. As the basis for compute-vmware role will use default Fuel compute-vmware role. Compute-vmware will be located on the openstack side of hybrid environment and will include nova-compute with Contrail Nova vCenter driver. One compute-vmware will serve one vCenter. In the current release work with multiple vCenter instances is not supported. Compute-vmware role will be not compatible with any other role. Contrail-vmware will be located on vmware side of hybrid environment and will include Contrail vRouter. One contrail-vmware must to be installed on each ESXi node. Contrail-vmware role will not be compatible with any other role. Integration assumes that vmware part of the environment already exists - datacenter and clusters are created. Deployment of the environment will include 2 stages. During the 1st stage user will run script that prepares vmware part for deployment (creates few Distributed Switches and spawns virtual machine on each ESXi node). The rest of management will provided by the Fuel master

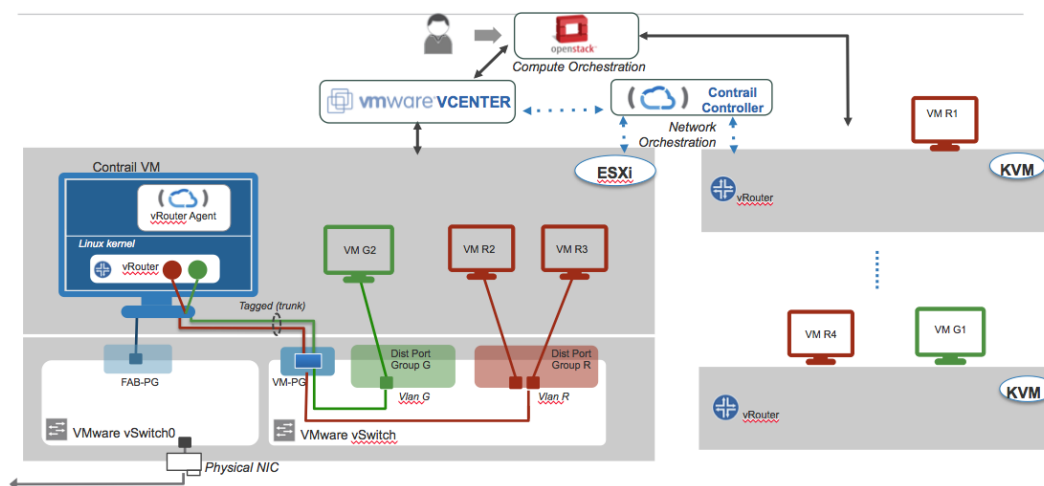

Prerequisites

- Installed [Fuel 9.1](#)
- Installed Fuel Contrail Plugin [Installation Guide](#)
- Environment must be created with “vCenter” support for compute virtualization and Contrail for networking
- vSphere environments must be already preconfigured
- pyvmomi python package need to be installed for vmware provision script

Restrictions

- There must be a single vmware-compute node for each vCenter
- Compute-vmware role can not be combined with any other roles
- Contrail-vmware role can not be combined with any other roles
- The environment must contain at least one KVM/QEMU compute node
- According contrail package (version: 3.1.0.0-25) [bug](#) we can use only one cluster per Datacenter.
- All ESXi hosts in vCenter cluster must have instance with contrail-vmware role

Configuration

To install environment with Contrail and VMWare support you should proceed with following steps:

1. Install pyvmomi module

```
[root@nailgun ~]# easy_install pyvmomi
```

2. Fill vmware credentials in Fuel vmware tab

VMware vCenter Settings

vCenter

Availability zone	<input type="text" value="vcenter"/>	Availability zone name
vCenter host	<input type="text" value="172.16.0.145"/>	vCenter host or IP
vCenter username	<input type="text" value="root"/>	vCenter username
vCenter password	<input type="password" value="*****"/>	vCenter password

3. Run script that will spawn ContrailVM's, DVS's

```
[root@nailgun ~]# cd /var/www/nailgun/plugins/contrail-5.1/deployment_
scripts/
[root@nailgun deployment_scripts]# ./spawner.py --env_id 1 --spawn
```

4. Wait a few minutes when ContrailVM's node will be arrived

11:04:39 New node is discovered: 3 CPUs / 2.0 GB RAM / 21.0 GB HDD

11:04:11 New node is discovered: 3 CPUs / 2.0 GB RAM / 21.0 GB HDD

11:04:10 New node is discovered: 3 CPUs / 2.0 GB RAM / 21.0 GB HDD


5. To verified if the nodes from vmware you may check "Node Information"

Node Information ×


Manufacturer: VMWARE	Management IP: 10.109.1.10
FQDN: node-11.test.domain.local	Public IP: N/A
	MAC Address: 00:16:3e:26:a1:3e
	Hostname: node-11

CPU 3 x 2.40 GHz	+
Disks 1 drive, 150.0 GB total	+
Interfaces 3 x N/A	+
Memory 1 x 2.0 GB, 2.0 GB total	+
System VMWARE	+
NUMA topology 1 NUMA node	+

6. Assign all planned roles (including **single compute-vmware** role and contrail-vmware for each ESXi host) in Nodes tab from Fuel UI

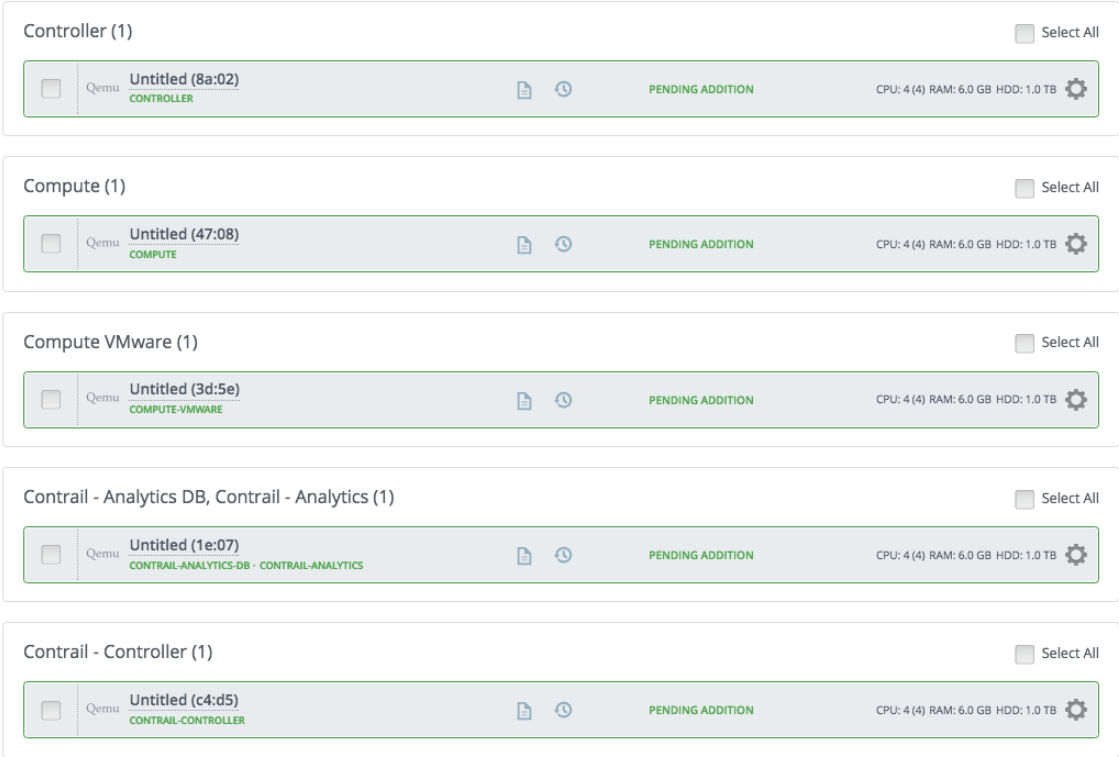

7. ContrailVM's will be spawned with 3 network interfaces (the first two for fuel networks and third for vmware connection) therefore we assume that public, storage and management network will use vlan tagging

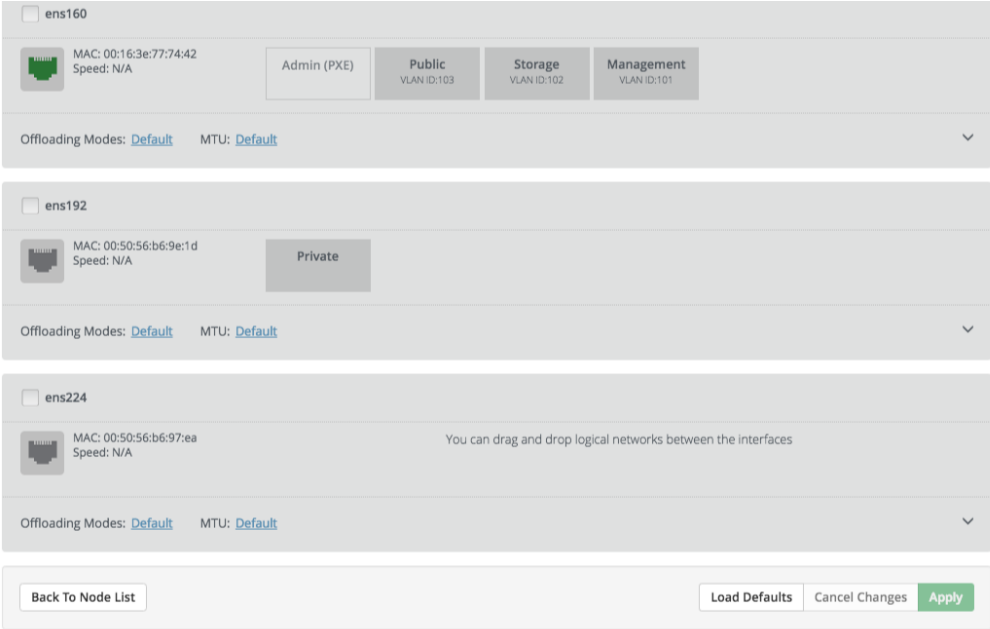

8. Fill settings in VMware tab from Fuel UI

VMware vCenter Settings

vCenter

Availability zone: Availability zone name

vCenter host: vCenter host or IP

vCenter username: vCenter username

vCenter password: vCenter password

Nova Computes

☒ Nova Compute Instance

vSphere cluster: vSphere cluster

Service name: Service name

Datastore regex: Datastore regex

Target node: Target node for nova-compute service

Glance ⚠

9. Fill additional settings in Fuel Contrail plugin settings from Fuel UI

ESXi datastore name	<input type="text" value="nfs"/>	Name of datastore where ContrailVM will be spawned
ESXi uplink admin	<input type="text" value="vmnic1"/>	Name of interface that provide connection between ESXi node and Fuel admin network
ESXi uplink private	<input type="text" value="vmnic2"/>	Name of interface that provide connection between ESXi node and Fuel private network
vCenter Datacenter name	<input type="text" value="Datacenter"/>	Name of vCenter Datacenter
External DVS name	<input type="text" value="Contrail-DVS-Ext"/>	Name of DVS that provide connection between ESXi nodes and Fuel admin network
Private DVS name	<input type="text" value="Contrail-DVS-Priv"/>	Name of DVS that provide connection between ESXi nodes and Fuel private network
Internal DVS name	<input type="text" value="Contrail-DVS-Int"/>	Name of DVS that need for internal contrail traffic

10. Deploy environment

Verification

After deploy finishes, you can verify your installation.

1. Check that Contrail services are running on compute node:

```
root@node-35:~# contrail-status
== Contrail vRouter ==
supervisor-vrouter:      active
contrail-vrouter-agent   active
contrail-vrouter-nodemgr active
```

2. Check that Contrail services are running on ContrailVM:


```
root@ContrailVM-249:~# contrail-status
== Contrail vRouter ==
supervisor-vrouter:          active
contrail-vrouter-agent       active
contrail-vrouter-nodemgr     active
```

VMware related options

From VMware tab:

- *Availability zone* - openstack availability zone name
- *vCenter host* - vCenter host or IP
- *vCenter username* - vCenter username
- *vCenter password* - vCenter password
- *vSphere cluster* - name of vSphere cluster
- *Service name* - nova-compute service name on compute-vmware
- *Datastore regex* - Datastore regex
- *Target node* - Target node for nova-compute service

From Fuel Contrail plugin settings:

- *ESXi datastore name* - Name of datastore where ContrailVM will be spawned
- *ESXi uplink admin* - Name of interface that provide connection between ESXi node and Fuel admin network
- *ESXi uplink private* - Name of interface that provide connection between ESXi node and Fuel private network
- *vCenter Datacenter name* - name of vCenter Datacenter
- *External DVS name* - Name of DVS that provide connection between ESXi and Fuel admin network
- *Private DVS name* - Name of DVS that provide connection between ESXi and Fuel private network
- *Internal DVS name* - Name of DVS need for internal contrail traffic

spawer.py parameter description:

- **-env_id*(type int)* - id of Fuel environment (mandatory parameter)
- **-spawn*(type boolean)* - spawn vm's for contrail-vmware role. When run script with this parameter it will take credential from Fuel vmware tab, create dvs's with port groups, spawn vm's on each ESXi host in cluster and attach their to all dvs's.
- **-map-ips*(type boolean)* - this need for internal plugin calculations
- **-dvs-mtu-ext*(type int)* - set max MTU for external DVS
- **-dvs-mtu-priv*(type int)* - set max MTU for private DVS
- **-dvs-mtu-int*(type int)* - set max MTU for internal DVS

- ***-cluster-list***(type str) - change cluster list in Fuel. This option is deprecated no need to you it.
- ***-reduce-vm-params***(type boolean) - Reduce memory value for ContrailVM's, for production purposes this parameter not recommend to use.

Add and delete ESXi hosts

Add ESXi host:

1. Add ESXi host to vCenter cluster manually
2. Run script that will spawn additional ContrailVM

```
[root@nailgun ~]# cd /var/www/nailgun/plugins/contrail-5.1/deployment_
↳scripts/
[root@nailgun deployment_scripts]# ./spawner.py --env_id 1 --spawn
```

3. Wait a few minutes when ContrailVM's node will be arrived
4. Assign contrail-vmware role on new ContrailVM
5. Run "Deploy Changes"

Remove ESXi host:

1. In Fuel UI remove contrail-vmware instance that located on ESXi host which you want to remove.
2. Run "Deploy Changes"
3. Remove ESXi host from vCenter cluster manually

Contrail upgrades (experimental)

Description

Starting from version 4.0.1 the Fuel Contrail Plugin includes the set of tasks and scripts that allow the cloud administrator to upgrade the Contrail packages along with Contrail configuration with minimal downtime to production network. The upgrade process is divided into tasks, that modify only the components that need to be upgraded without touching other OpenStack components. The packages are updated using the plugin-based repository, and configuration files are updated using the templates included in the latest plugin version. Controllers and compute nodes are upgraded separately, using puppet manifests provided with plugin. Other contrail-specific roles such as DPDK-compute, VMWare-compute, and TSN are not supported yet. More information on running custom deployment graphs can be found in [Fuel User Guide](#)

Prerequisites

This guide assumes that you have installed Fuel 9.1 with the Fuel Contrail plugin, and successfully deployed the environment according to *Installation Guide*.

Package versions supported:

- Fuel Contrail plugin $\geq 5.0.0$
- Juniper Contrail $\geq 3.1.0$

Update the packages on Fuel Master node

In case Fuel Contrail plugin package should be upgraded, please execute steps 1-3, otherwise proceed to step 4.

1. Obtain the latest package of Fuel Contrail plugin that supports your Fuel version.
2. Copy the rpm package downloaded at previous step to the Fuel Master node

```
scp contrail-5.1-5.1.0-1.noarch.rpm <Fuel Master node ip>:/tmp/
```

3. Log in to the Fuel Master node and upgrade the plugin:

```
ssh <the Fuel Master node ip>  
fuel plugins --update /tmp/contrail-5.1-5.1.0-1.noarch.rpm
```

4. Copy the latest Juniper Contrail installation package to the Fuel Master node and run the installation script to unpack the vendor package and populate the plugin repository with up-to-date packages:

```
scp contrail-install-packages_3.2.0.0-19~mitaka_all.deb \  
  <Fuel Master node ip>:/var/www/nailgun/plugins/contrail-5.1/  
ssh <Fuel Master node ip> /var/www/nailgun/plugins/contrail-5.1/install.sh
```

Upgrade Contrail and OpenStack Controllers

The first upgrade step involves the controllers, both for OpenStack and Contrail. Upgrade tasks stop Contrail config services for the time of upgrade, this will stop Neutron operations for 10-20 minutes without affecting the workload. The Contrail control nodes will be upgraded and restarted one-by-one to keep BGP and XMPP connectivity. After the tasks have been finished on contrail nodes, the upgrade of OpenStack controllers starts. The Neutron service will be restarted in case if contrail core plugin will be upgraded.

1. Log in to Fuel Master node, change the working directory to plugin folder:

```
ssh <the Fuel Master node ip>
cd /var/www/nailgun/plugins/contrail-5.1/
```

2. Check ID of contrail plugin:

```
fuel plugins
```

3. Check ID of your env:

```
fuel2 env list
```

4. Upload upgrade graph:

```
fuel2 graph upload --plugin <plugin-ID> --type contrail_upgrade_control --file ↵
↵upgrade_control.yaml
```

5. Verify the graph has been uploaded:

```
fuel2 graph list --env <env-ID>
```

6. Execute the custom graph to upgrade control plane:

```
fuel2 graph execute --env <env-ID> --type contrail_upgrade_control
```

7. Run the contrail service verification steps from *Verify Contrail plugin* to ensure that all Contrail services are up and running. You can verify the version of Contrail packages using Contrail Web UI or `contrail-version` CLI command.

Upgrade Compute nodes

After the control plane has been upgraded, you can upgrade OpenStack Compute nodes. The upgrade task can install the latest version of Contrail vRouter, correctly replacing the kernel module without host reboot. The task upgrades compute hosts one by one, in ascending order by node ID. The instances running on particular compute node will lose network connectivity during the vRouter upgrade, this can take up to 5 min.

1. Log in to Fuel Master node, change the working directory to plugin folder:

```
ssh <the Fuel Master node ip>
cd /var/www/nailgun/plugins/contrail-5.1/
```

2. Check ID of contrail plugin:

```
fuel plugins
```

3. Check ID of your env:

```
fuel2 env list
```

4. Upload upgrade graph:

```
fuel2 graph upload --plugin <plugin-ID> --type contrail_upgrade_compute --file ↵  
↵upgrade_compute.yaml
```

5. Verify the graph has been uploaded:

```
fuel2 graph list --env <env-ID>
```

6. Execute the custom graph to upgrade compute hosts:

```
fuel2 graph execute --env <env-ID> --type contrail_upgrade_compute
```

7. Log in to compute nodes and verify output of the `contrail-status` command. You can verify the version of the vRouter package by running `contrail-version` command.

Verify Contrail plugin

To verify your installation after deployment, perform the basic checks described below.

1. Verify that Contrail services are running.
 - (a) Login to the Contrail controller node and run `contrail-status` command. All services should be in “active” state:

```
# contrail-status
== Contrail Control ==
supervisor-control:      active
contrail-control         active
contrail-control-nodemgr active
contrail-dns             active
contrail-named           active

== Contrail Analytics ==
supervisor-analytics:    active
contrail-analytics-api   active
contrail-analytics-nodemgr active
contrail-collector       active
contrail-query-engine    active
contrail-snmp-collector  active
contrail-topology        active

== Contrail Config ==
supervisor-config:       active
contrail-api:0           active
contrail-config-nodemgr  active
contrail-device-manager  active
contrail-discovery:0     active
contrail-schema          active
contrail-svc-monitor     active
ifmap                   active

== Contrail Web UI ==
supervisor-webui:        active
```


```

contrail-webui           active
contrail-webui-middleware active
== Contrail Database ==
supervisor-database:    active
contrail-database        active
contrail-database-nodemgr active
kafka                   active

```


2. Verify the list of peers and peering status

- (a) Login to Contrail web UI
- (b) Go to *Monitor* -> *Control nodes*
- (c) Choose any and select a *Peers* tab. You should see your compute nodes (vRouters) and external router in a list of peers with status **Established**

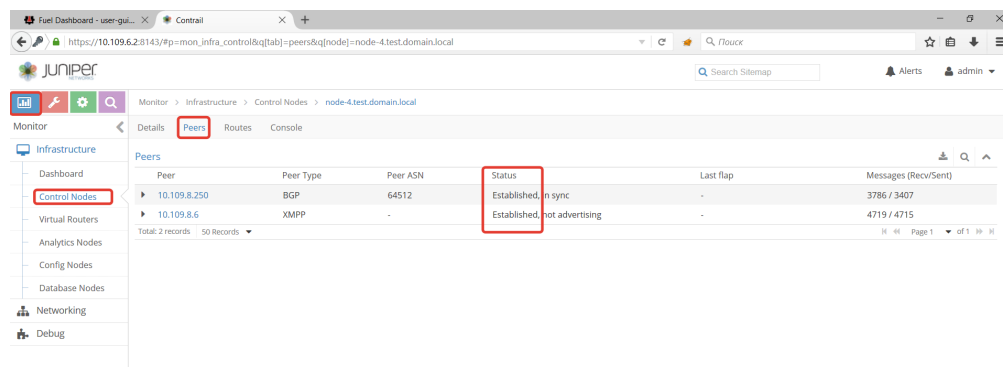

3. Verify that external router has been provisioned correctly:

- (a) Login to Contrail web UI
- (b) Go to *Configure* -> *Infrastructure* -> *BGP routers*.
- (c) Verify the IP address of the router

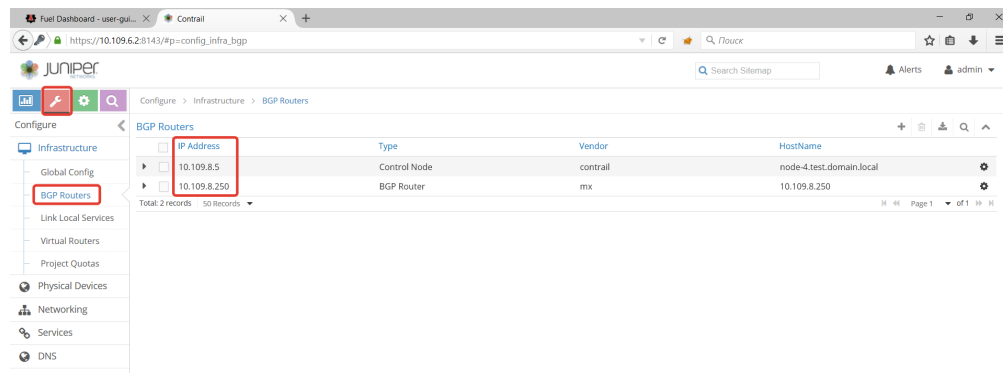

- (a) Use health checks in Fuel web UI, also called OSTF tests.

Run OSTF tests

Prerequisites for OSTF

1. OSTF tests require two pre-defined networks created - `admin_internal_net` and `admin_external_net`. The networks are created by Fuel during deployment. This section includes instructions how to create them if they were accidentally deleted. Floating IP addresses from `net04_ext` should be accessible from Fuel master node.
2. Three tests from `Functional tests` set require floating IP addresses. They should be configured on external router, routable from Fuel master node and populated in the Openstack with Contrail environment.
3. HA tests require at least three Openstack controllers.
4. Platform services functional tests. require Ceilometer and MongoDB.

Configure OSTF networks and floating IPs

To configure OSTF networks and floating IPs:

1. Go to Contrail web UI *Configure -> Networking -> Networks*
2. Create network `admin_internal_net`

Create Network

Name:

Network Policy(s):

▼ Subnets

IPAM	CIDR	Allocation Pools	Gateway	DNS	DHCP	
default-network-ipam (defau... ▼	192.168.111.0/24	192.168.111.10-19 2.168.111.250	<input checked="" type="checkbox"/> 192.168.111.1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	+ -

► Host Routes

► Advanced Options

► Floating IP Pools

► Route Targets

Cancel Save

3. Create network `admin_external_net`.

Create Network

Name

Network Policy(s)

Subnets

IPAM	CIDR	Allocation Pools	Gateway	DNS	DHCP	
default-network-ipam (defau...	10.100.1.0/24	10.100.1.10 - 10.100.1.250	<input checked="" type="checkbox"/> 10.100.1.1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	+ -

Host Routes

Advanced Options

Admin State

Cancel

Save

It should be marked as **shared** and **external**

Create Network

Advanced Options

Admin State

☒ Shared
 ☒ External

DNS Servers

+

Forwarding Mode

VxLAN Identifier

☐ Allow Transit

☐ Flood unknown unicast

☐ Extend To Physical Router(s)

Cancel

Save

And have same route target as configured in an external router

Create Network

VxLAN Identifier: Automatic

☐ Allow Transit

☐ Flood unknown unicast

☐ Extend To Physical Router(s)

► Floating IP Pools

▼ Route Targets

Route Target	+	-
64512	:	10000

Cancel Save

4. Allocate floating IP addresses from `admin_external_net`

(a) Go to Contrail WebUI *Configure -> Networking -> Manage Floating IPs*

Allocate Floating IP

Floating IP Pool: admin:net04_ext:default (10.100.1.0/24)

Allocation Type: Dynamic

Number of IP Addresses: 40

Cancel Save

5. Start OSTF tests.

See also:

[Fuel user-guide](#).

Warning: ‘OSTF test ‘Check network connectivity from SRIOV instance via floating IP’ is expected to fail in environments with Contrail. Contrail doesn’t support assigning floating addresses to SRIOV ports, they are treated as pci passthrough devices.

Troubleshooting

To troubleshoot:

1. Verify output of the `contrail-status` command.
2. Verify the logs for corresponding service:

- Contrail logs are located in `/var/log/contrail/` directory, and log names match with contrail service name.
- Cassandra logs are located in `/var/log/cassandra/`
- Zookeeper logs are in `/var/log/zookeeper/`

Restore failed Contrail node

This guide describes how to replace the failed Contrail all-in-one node (with all Contrail roles assigned) in a multi-node environment.

If your Contrail node has been crashed, follow the steps to fix the issue:

1. Remove failed node from Cassandra cluster (on working contrail node)

- (a) Obtain Host-ID of the failed Cassandra node:

```
nodetool status
```

- (b) Remove the failed node:

```
nodetool removemode <Host-ID>
```

2. Deprovision analytics, control, database, and config components of the failed node from contrail db.

- (a) Obtain IP address of Contrail API endpoint (Management VIP):

```
hiera management_vip
```

Example of system response:

```
10.109.1.3
```

- (b) Obtain Neutron service password:

```
hiera neutron_config | grep admin_password
```

Example of system response:

```
"keystone"=>{"admin_password"=>"VerySecurePassword!"},
```

- (c) Deprovision `contrail-config`:

```
/opt/contrail/utils/provision_config_node.py \
--api_server_ip <Management VIP> \
--api_server_port 8082 \
--oper del \
--host_name node-294.domain.tld \
--host_ip 172.21.129.193 \
--admin_user neutron \
--admin_tenant_name services \
--admin_password <Neutron password>
```

(d) Deprovision contrail-analytics:

```
/opt/contrail/utils/provision_analytics_node.py \
--api_server_ip <Management VIP> \
--api_server_port 8082 \
--oper del \
--host_name node-294.domain.tld \
--host_ip 172.21.129.193 \
--admin_user neutron \
--admin_tenant_name services \
--admin_password <Neutron password>
```

(e) Deprovision contrail-control:

```
/opt/contrail/utils/provision_control.py \
--api_server_ip <Management VIP> \
--api_server_port 8082 \
--oper del \
--host_name node-294.domain.tld \
--host_ip 172.21.129.193 \
--router_asn 64512 \
--admin_user neutron \
--admin_tenant_name services \
--admin_password <Neutron password>
```

(f) Deprovision contrail-database:

```
/opt/contrail/utils/provision_database_node.py \
--api_server_ip <Management VIP> \
--api_server_port 8082 \
--oper del \
--host_name node-294.domain.tld \
--host_ip 172.21.129.193 \
--admin_user neutron \
--admin_tenant_name services \
--admin_password <Neutron password>
```

3. Add a new node with Contrail roles and deploy it with Fuel

CHAPTER 14

Use Contrail

This document describes very basic operations with Contrail UI.

See also:

[Juniper documentation](#).


Log into Contrail


To log into Contrail web UI, use the OpenStack admin credentials.




Login

Sign in using your registered account:








Verify services status

Verify the status of Contrail Control Analytics and Config nodes along with vRouters in *Infrastructure* using *Dashboard* tab of the left-hand *Monitor* menu.

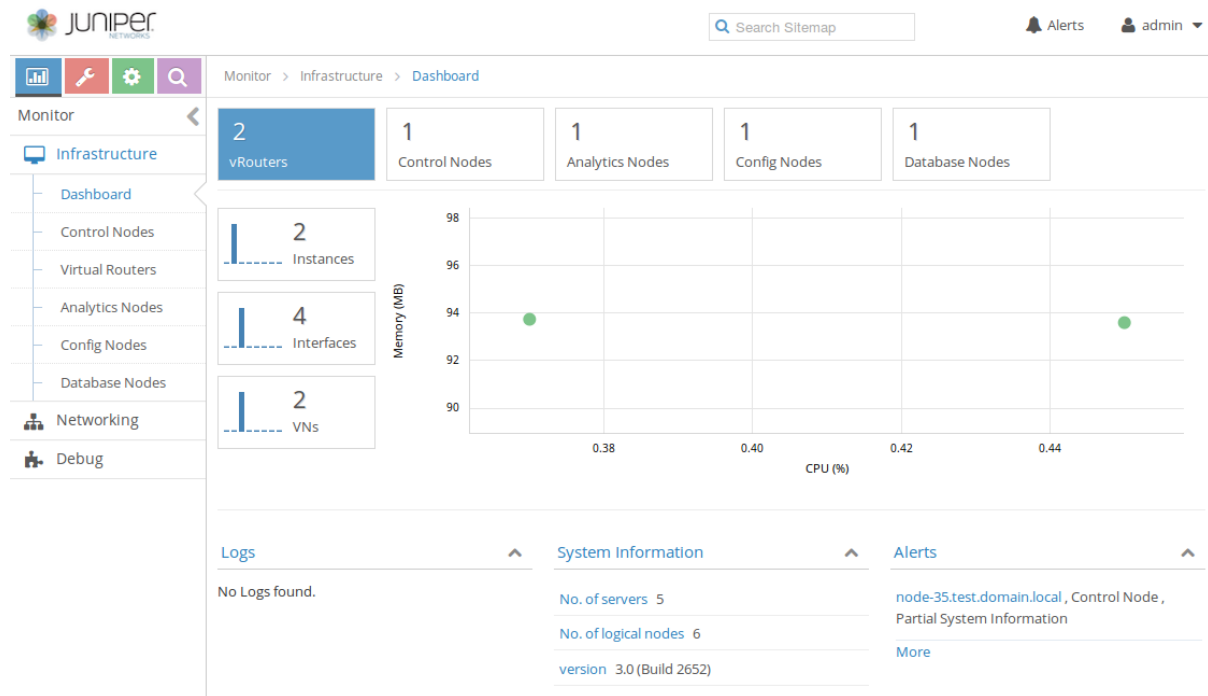

Create the virtual networks

To create the virtual networks:

- Open left-hand *Configure* menu and click *Networking* option. Enter *Networks* tab and use + sign at the right side to create a new virtual network. Enter the network name and add an IP subnet. Gateway address will be added automatically.

The screenshot shows the Juniper Contrail Configure page under the 'Configure' > 'Networking' > 'Networks' path. The page displays a table of virtual networks:

Network	Subnets	Attached Policies	Shared
<input type="checkbox"/> net04_ext	10.100.1.0/24		Enabled
<input type="checkbox"/> net04	10.100.0.0/24	pol1	Disabled

Below the table, it shows 'Total: 2 records' and '50 Records' with a dropdown menu. There are also navigation icons at the bottom right of the table.

- To create an external network, you need to add **Shared** and **External** flags to the created network using the **Advanced Options** sections and provide a proper Routing mark in

Route Targets section to let this network to be announced to the public routing table. The Routing mark is two numbers divided by a semicolon, for example 64512:10000.

Create Network ✕

IPAM	CIDR	Allocation Pools	Gateway	DNS	DHCP	
default-network-ipam (defa... ▼	10.100.1.0/24	10.100.1.10-10.100.1.254	<input checked="" type="checkbox"/> 10.100.1.1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	+ -

▶ Host Routes

▶ Advanced Options

▶ Floating IP Pools

▼ Route Targets

Route Target +

64512 : 10000 + -

Cancel

Save

CHAPTER 15

Appendix

1. Contrail overview.
2. Contrail overview at github.com.
3. Contrail major components.
4. Contrail architecture.
5. Contrail quick start guide.